A319/A320/A321 STUDENT NOTES LR Family to A319/A320/A321 PW1100G - T1+T2 31-INDICATING / RECORDING SYSTEMS

This document must be used for training purposes only.

Under no circumstances should this document be used as a reference.

It will not be updated.

All rights reserved No part of this manual may be reproduced in any form, by photostat, microfilm, retrieval system, or any other means, without the prior written permission of AIRBUS S.A.S.


AIRBUS Environmental Recommendation. Please consider your environmental responsability before printing this document.



stem Presentation	
n	
uration	
e	


31 Indicating/Recording System Presentation	
EIS Architecture	
ECAM Description/Operation	7
EFIS Description/Operation	9
DMC ARINC BUS Reconfiguration	10
EIS Abnormal Operation	
CFDS Fault Processing	
CFDS Aircraft System Types	
CFDS Failure Classification	
CFDS Phases	
CFDIU Functions	
Post Flight Report Filtering Function	
Printer Description/Operation	
Up & Down Loading System D/O	
FDIMU Interfaces.	
AIDS Description/Operation	



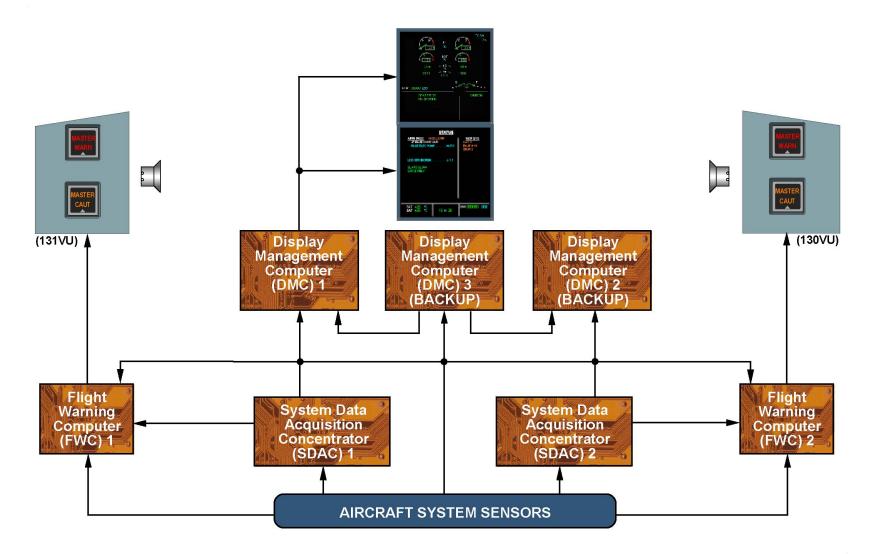

ELECTRONIC INSTRUMENT SYSTEM - ECAM




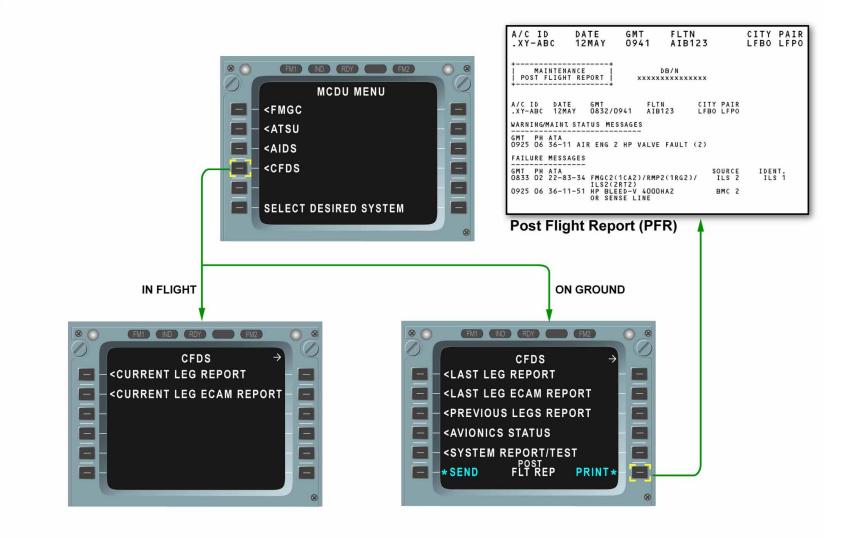

CENTRALIZED FAULT DISPLAY SYSTEM




SPC: Smart PCMCIA Card

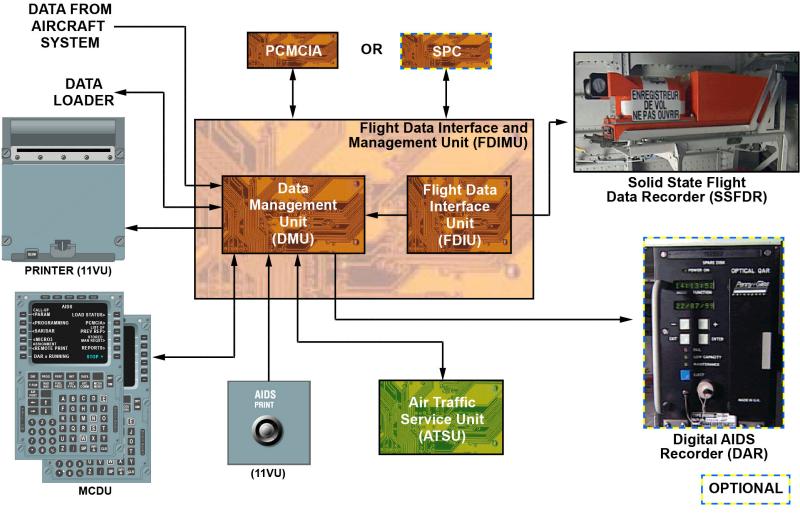


AIRCRAFT INTEGRATED DATA SYSTEM



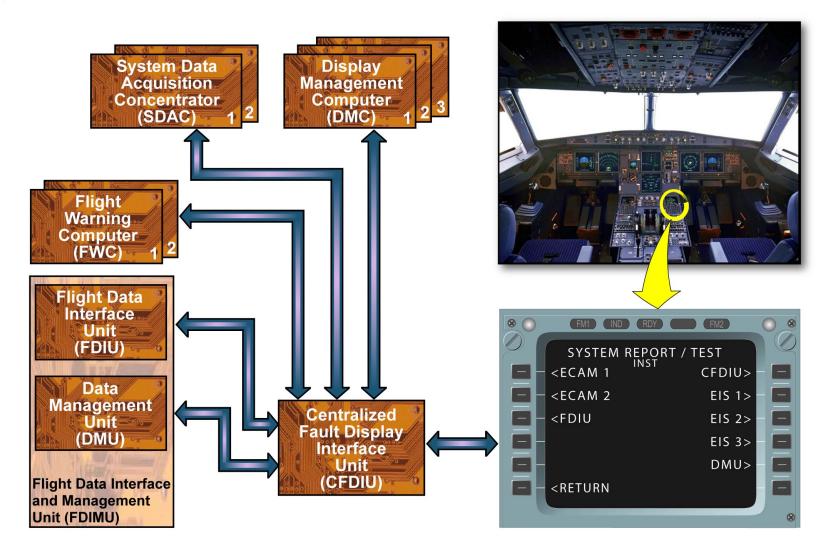


MAINTENANCE/TEST FACILITIES



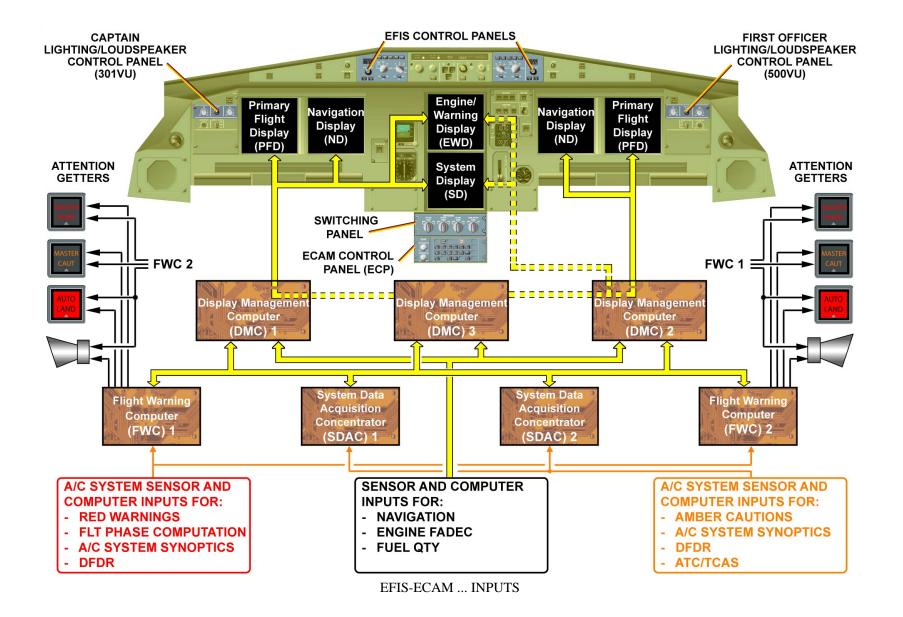





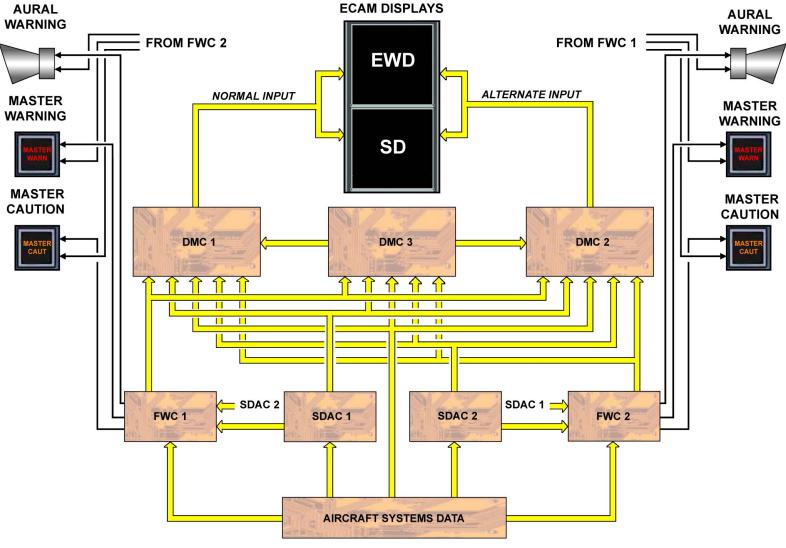

GENERAL PRESENTATION




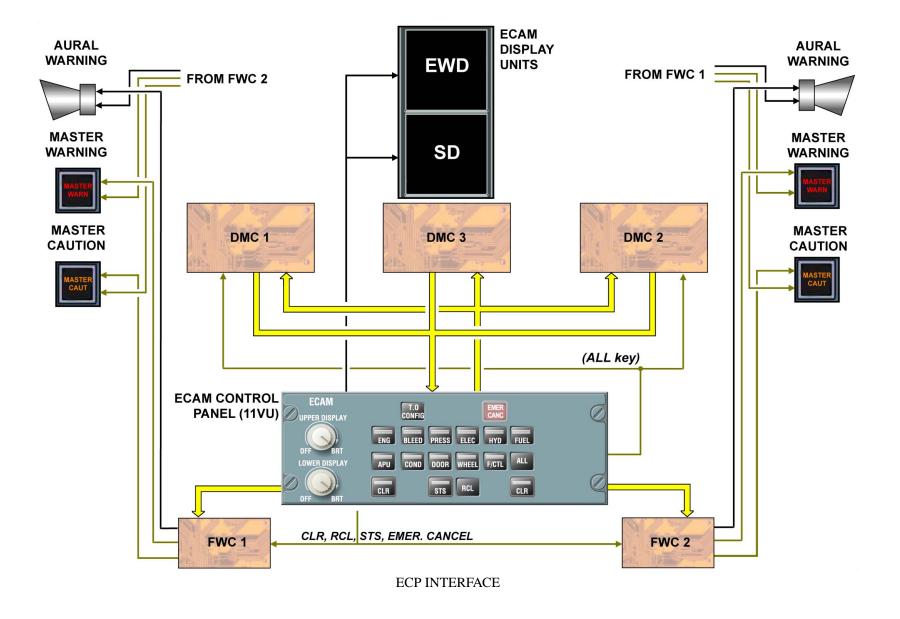

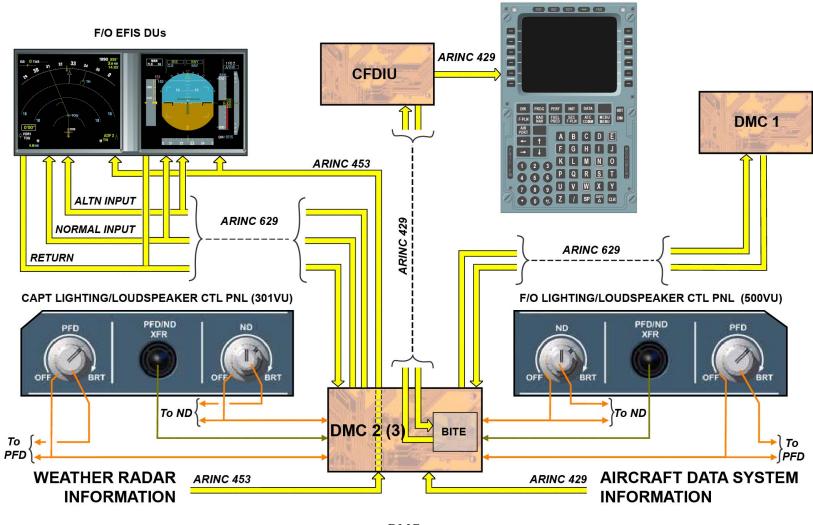


DMC



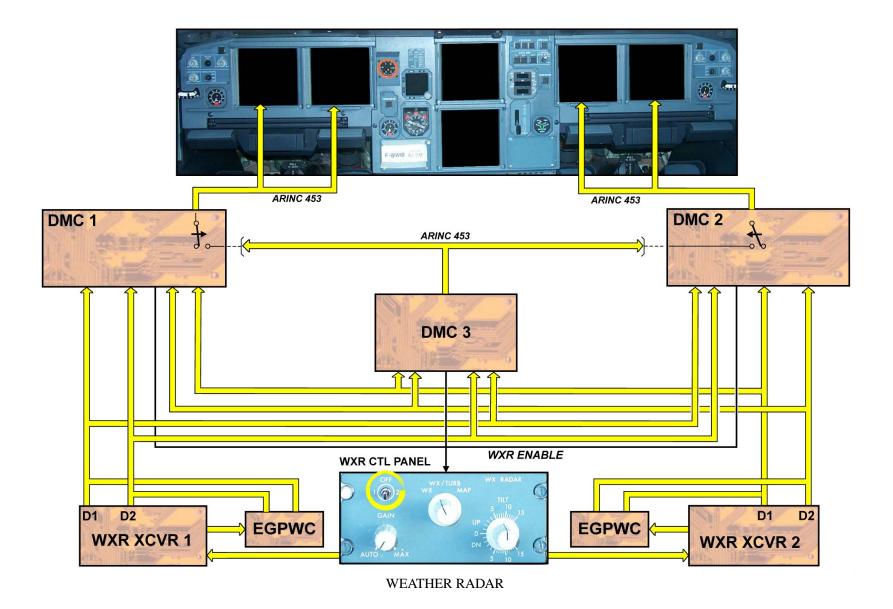




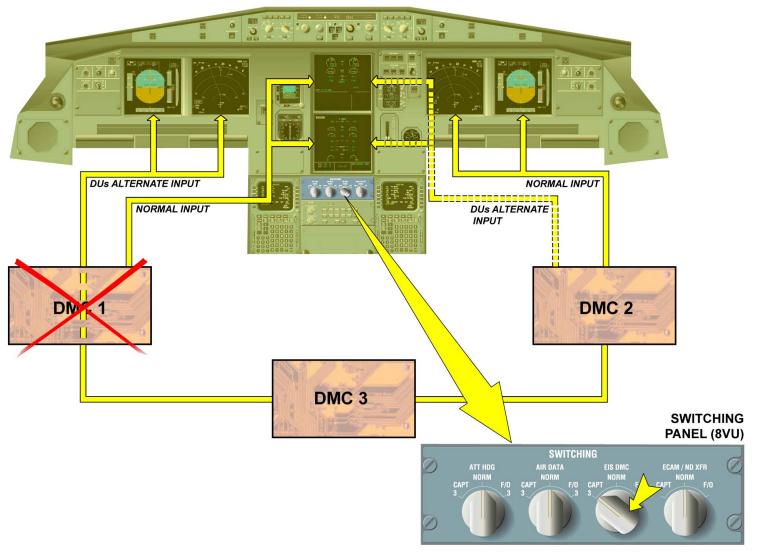


SINGLE OR MULTIPLE FAILURE - DMC FAILURE



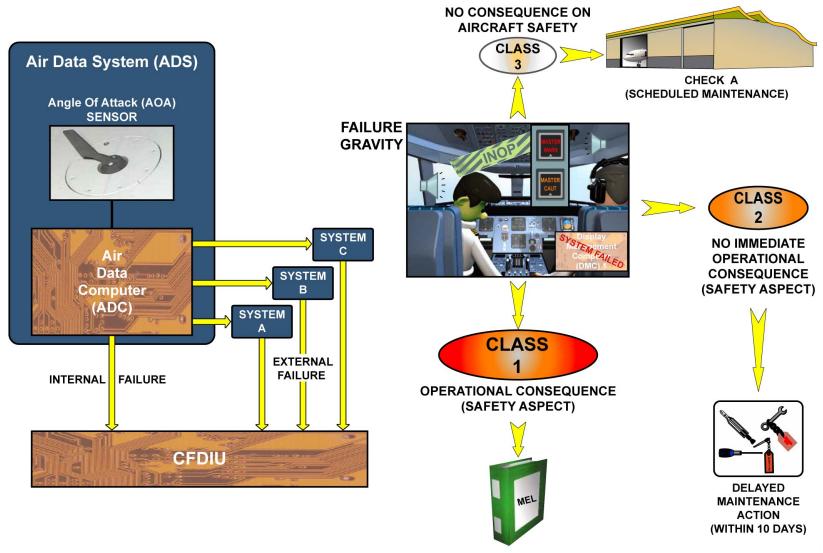

INTERNAL/EXTERNAL FAILURES & FAILURE GRAVITY



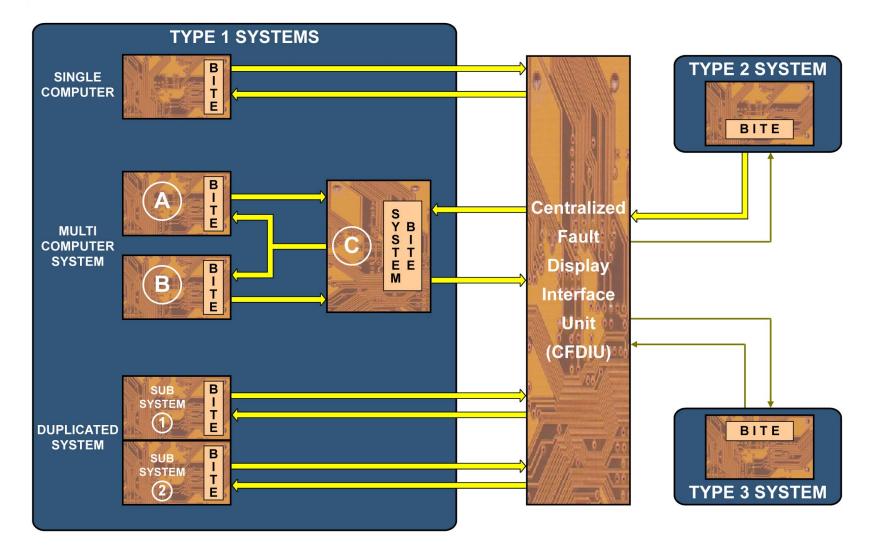


TYPE 1 SYSTEMS ... TYPE 3 SYSTEM

	CLASS 1 FAILURE	CLASS 2 FAILURE	CLASS 3 FAILURE
Operational consequence on the current flight	YES	NO	NO
Indicated to the pilots	YES Warnings/flags System pages	YES On the STATUS page	NO
Dispatch consequences	REFER TO MEL May be: "GO","GO IF" or "NO GO"	FUNCTIONS LOST INDICATED IN MEL "GO" without condition	NO REFERENCE IN MEL
Maintenance information	pilots in the log boo Are indicated at the each flight leg.	Have to be reported by the pilots in the log book. Are indicated at the end of each flight leg. MEL entry is required.	


SYNTHESIS



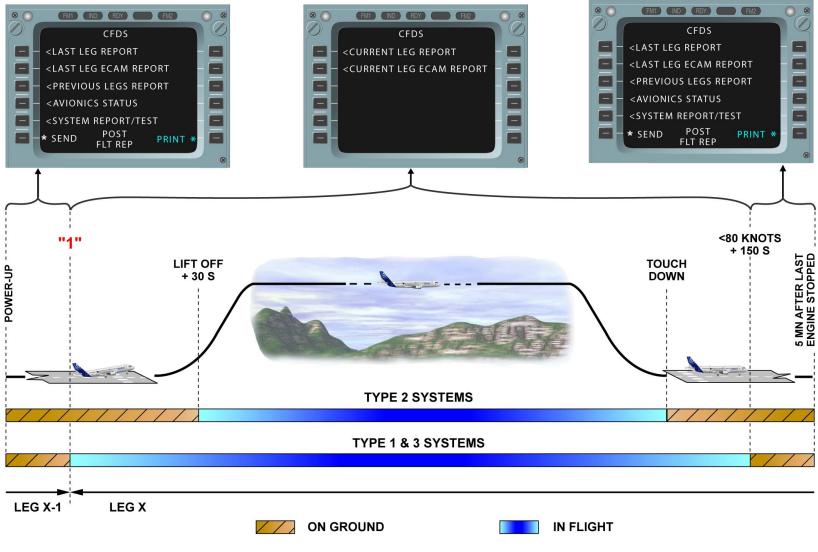


GROUND/FLIGHT TRANSITION ... ON GROUND PHASE



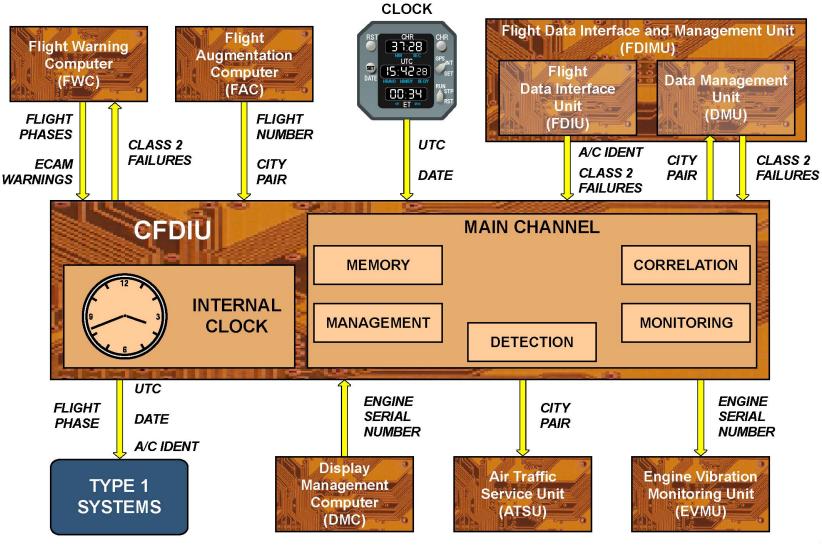


MAIN FUNCTIONS ... ABNORMAL OPERATION



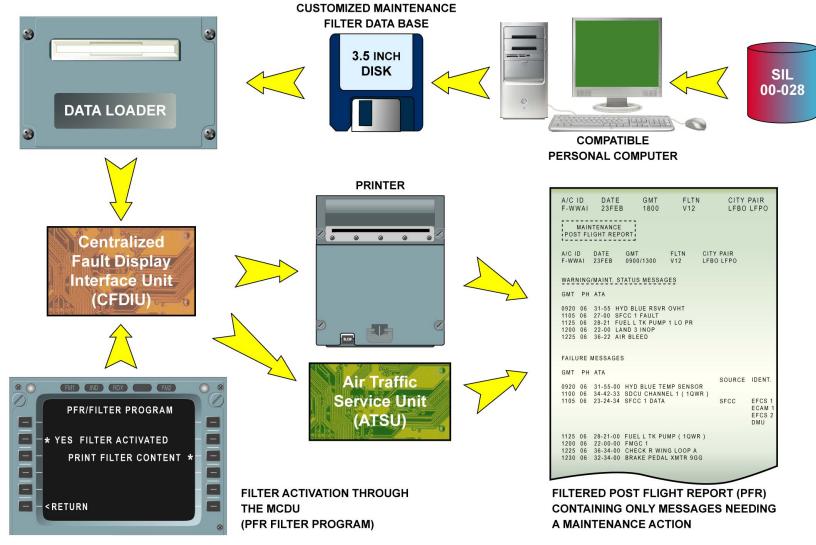


PURPOSE & FILTER DATA BASE CUSTOMIZATION AND LOADING



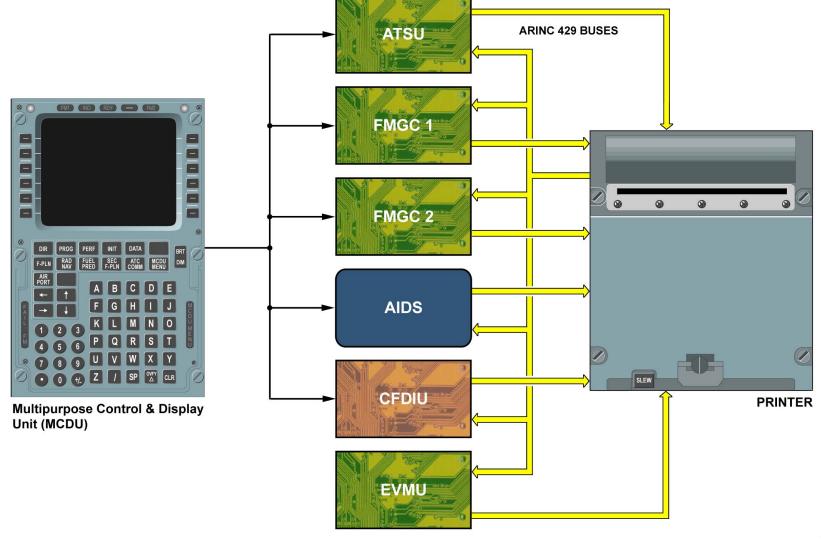


PRINTER CAPABILITY ... AUTOMATIC PRINT

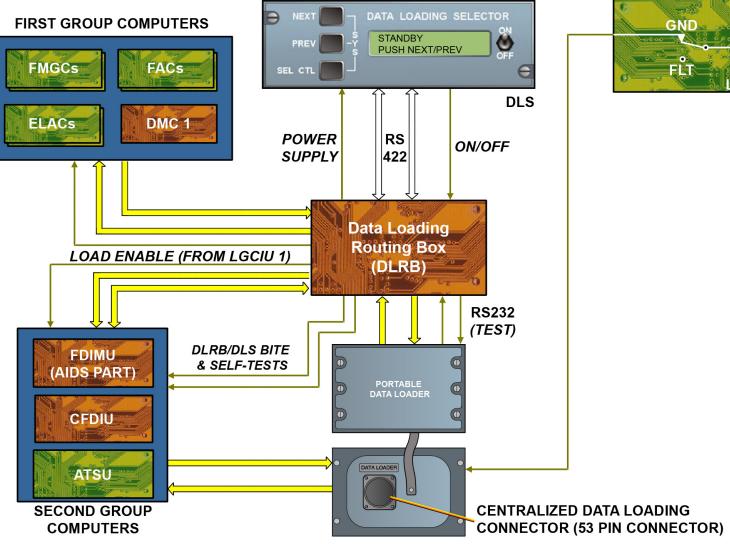


SYSTEM DESCRIPTION - GENERAL ARCHITECTURE ... SYSTEM TYPES

GCIU



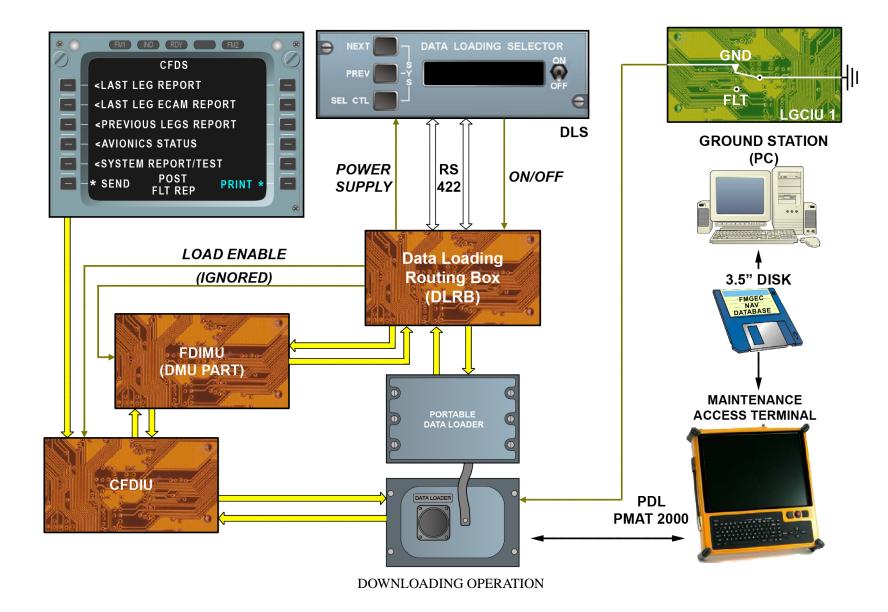




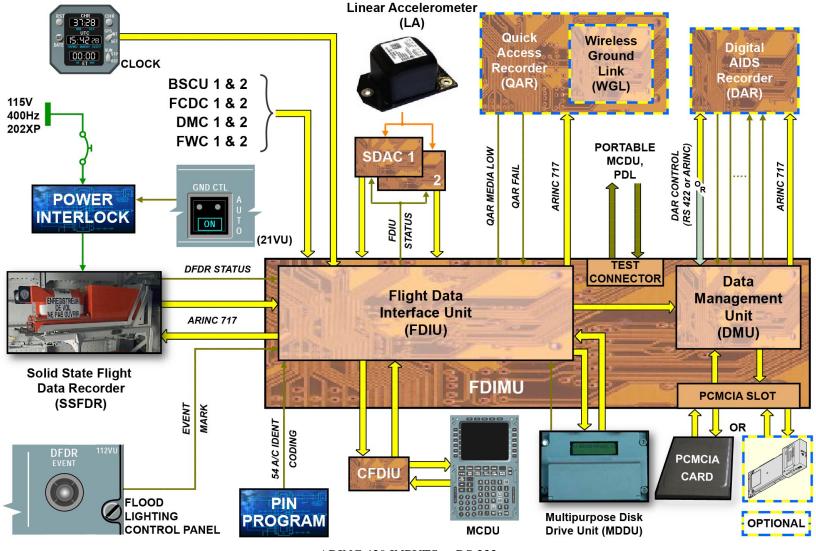

ARINC 429 INPUTS ... RS 232



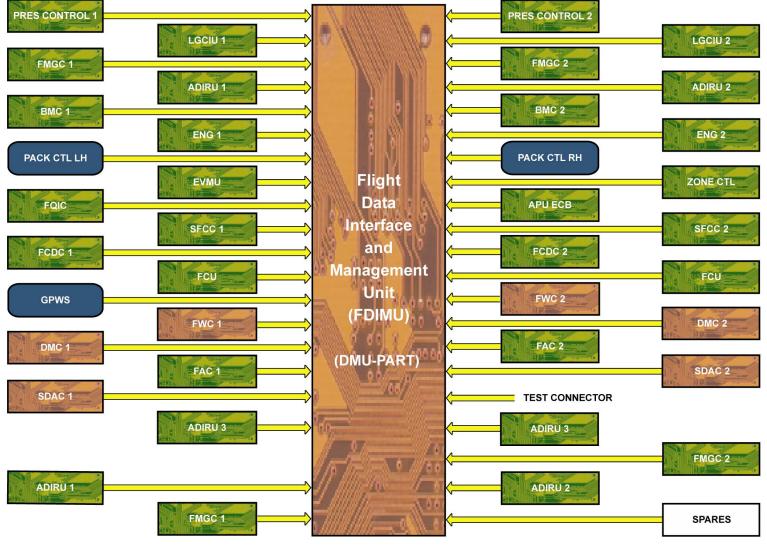

SYSTEM INTERFACE & PARAMETER CALL-UP



© AIRBUS SAS 2015. All rights reserved. Confidential and proprietary document.

This document and all information contained herein is the sole property of AIRBUS SAS. No intellectual property rights are granted by the delivery of this document or the disclosure of its content. This document shall not be reproduced or disclosed to a third party without the express written consent of AIRBUS SAS. This document and its content shall not be used for any purpose other than for which it is supplied. The statements made herein do not constitute an offer. They are based on the mentioned assumptions and are expressed in good faith. Where the supporting grounds for these statements are not shown, AIRBUS SAS will be pleased to explain the basis thereof.

AIRBUS, its logo, A300, A310, A318, A319, A320, A321, A330, A340, A350, A380, A400M are registered trademarks.